
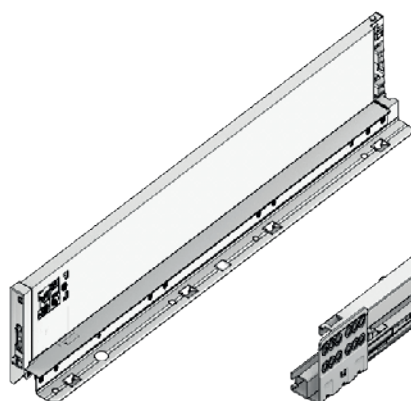



Tekform Slimline+ Drawer

Assembly instructions

Titus+

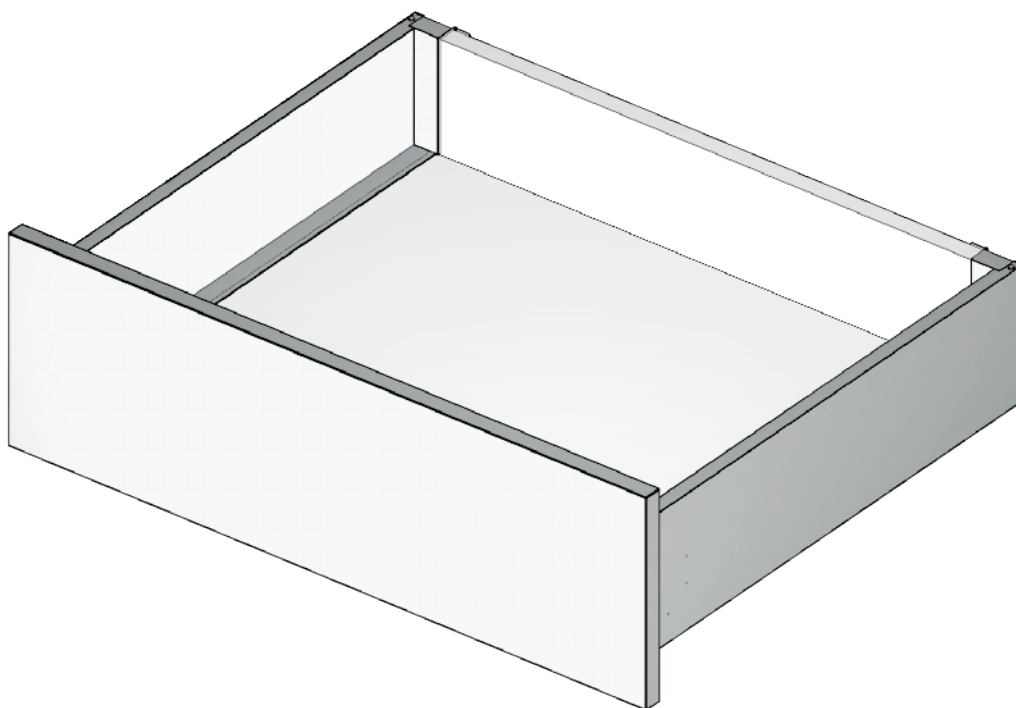

2x

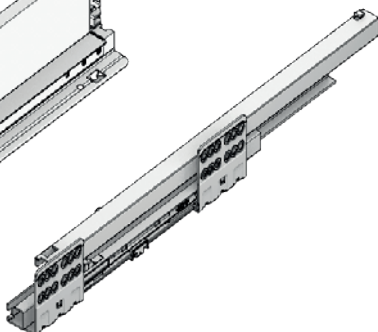

2x



2x




2x



2x

Tool needed for assembly

PZ2



Recommended screws (not included)

Ø6.3 x 13mm





Ø3.5 x 15mm



Tekform

Runner mounting

i

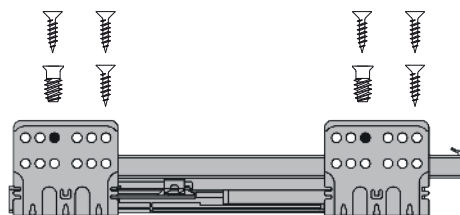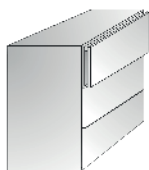

Ø6.3 x 13mm



Ø3.5 x 15mm



NL=270 mm

NL=300 mm



NL=350 mm

NL=400 mm



NL=450 mm

NL=500 mm

NL=550 mm

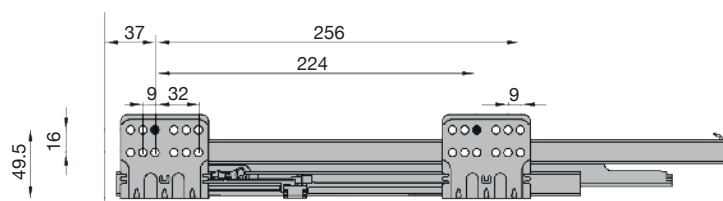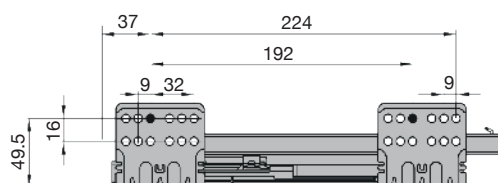

i

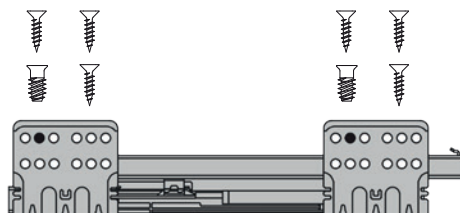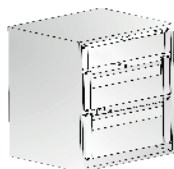

Ø6.3 x 13mm



Ø3.5 x 15mm



NL=270 mm

NL=300 mm



NL=350 mm

NL=400 mm

NL=450 mm



NL=500 mm

NL=550 mm

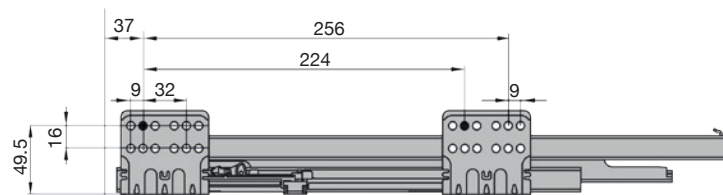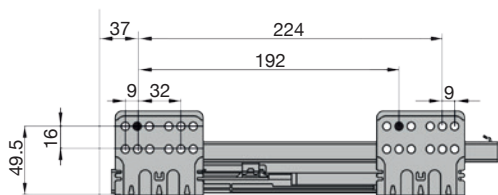


Planning

i

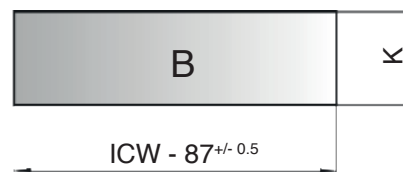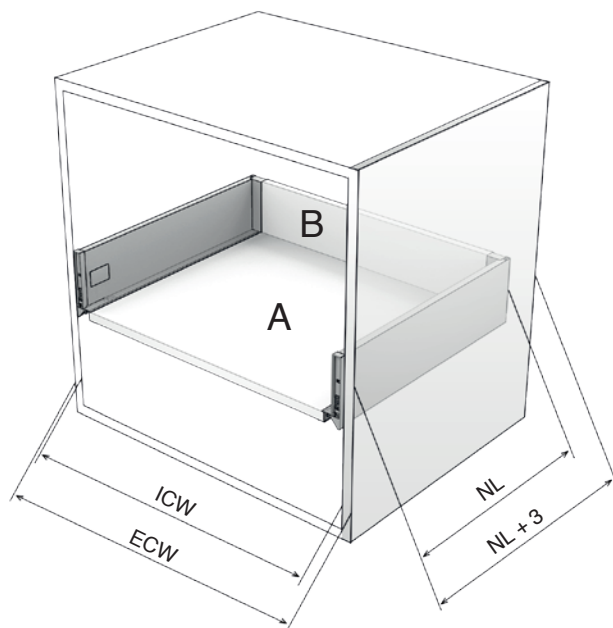

DW70	K=68
DW100	K=100
DW145	K=151
DW182	K=183

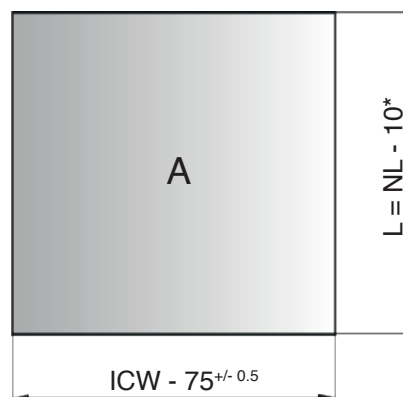


* For drawers with steel back panel
 $L = NL - 20$


Front Panel Dimensions and Drilling

i


DW70

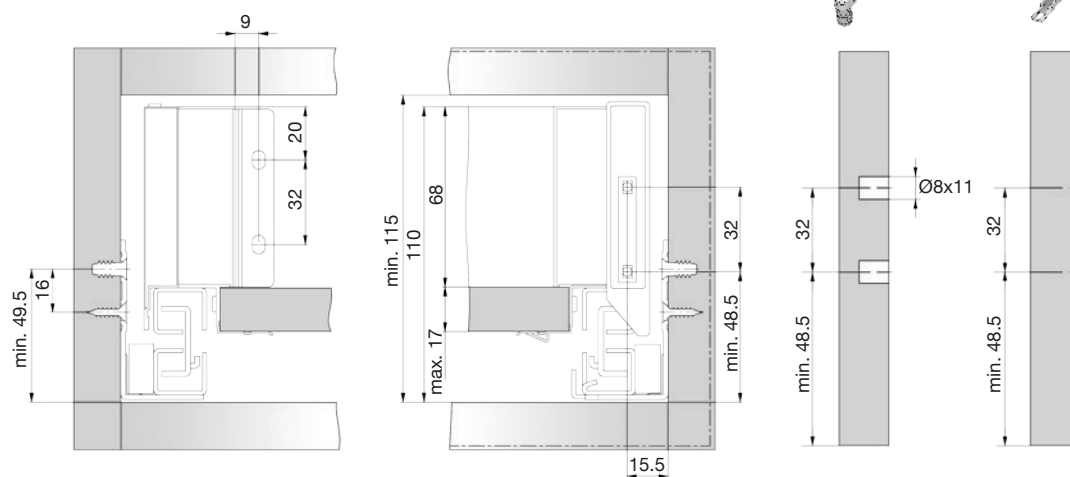


DW100

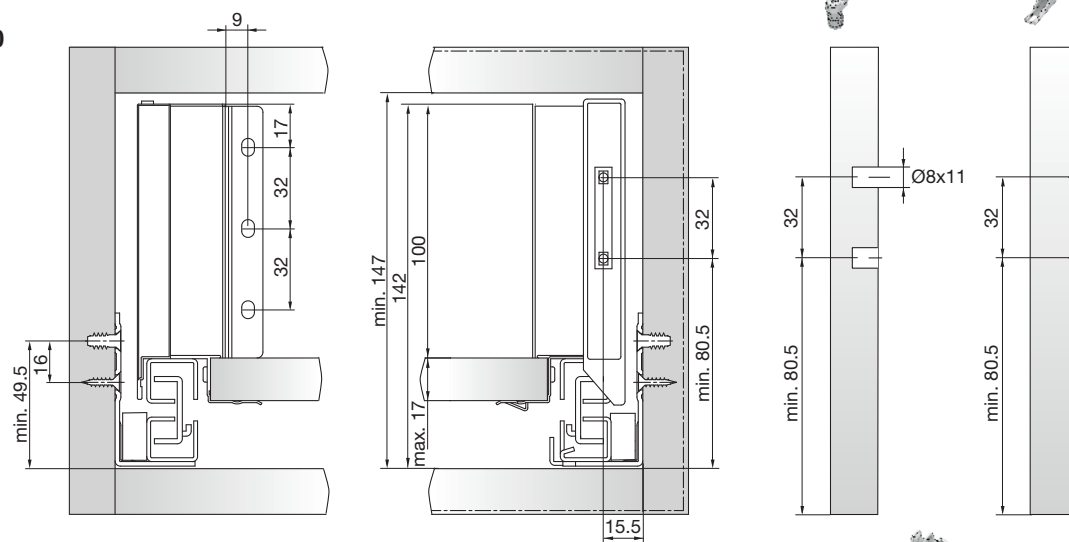

DW145

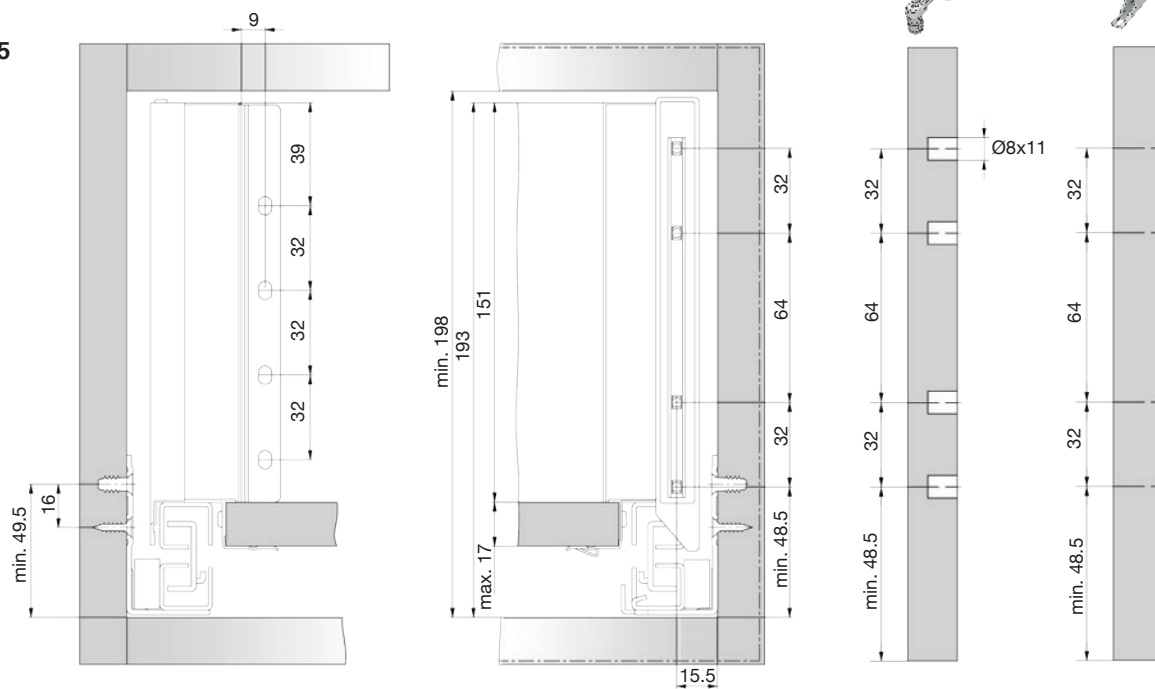

DW182

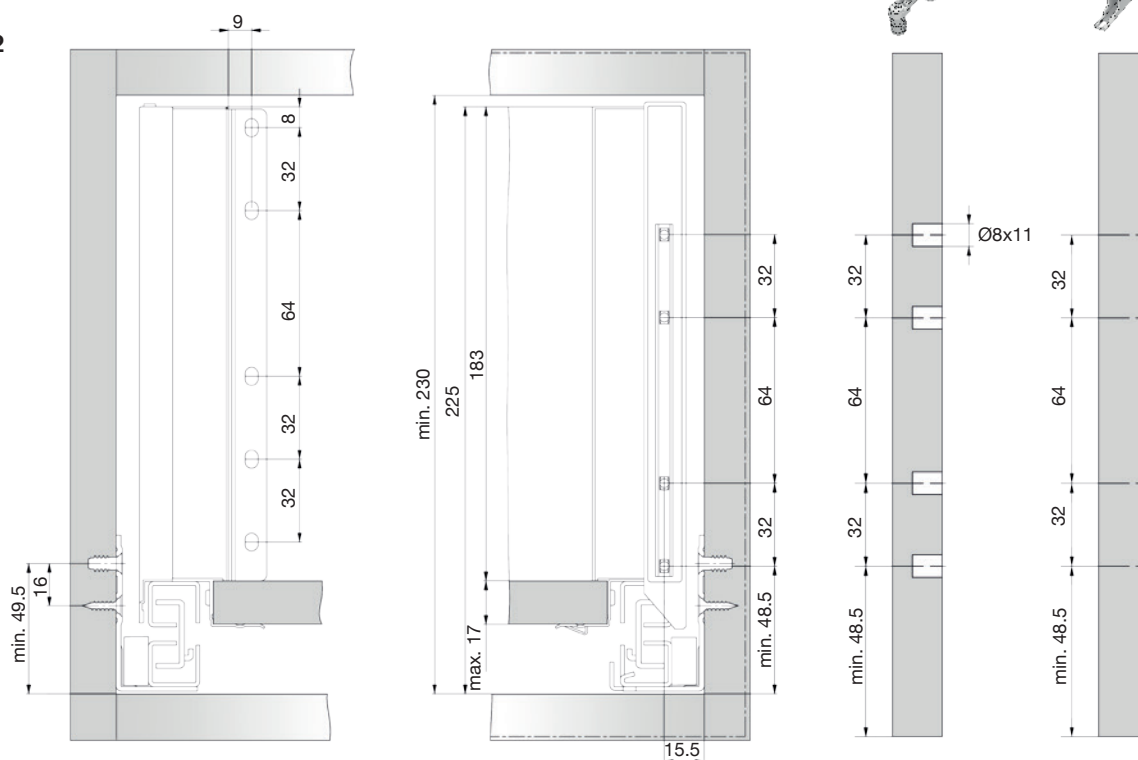

Assembly wooden back panel

1



2x



8x



Ø3.5 x 15 mm

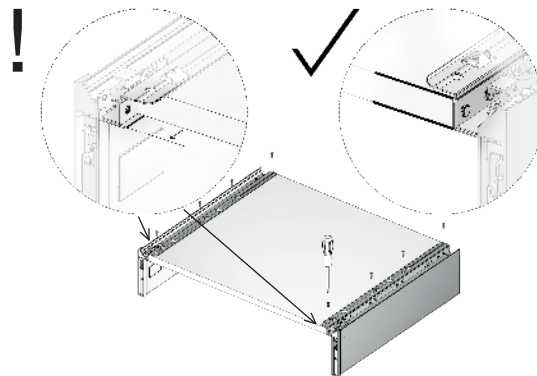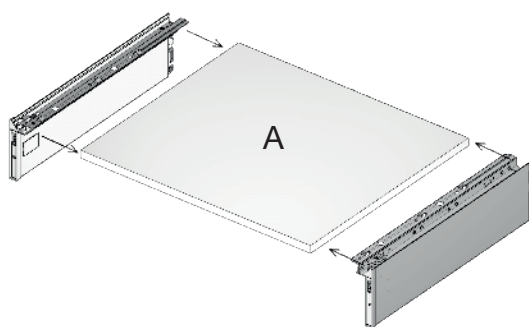

2



2x



4x





Ø3.5 x 15 mm

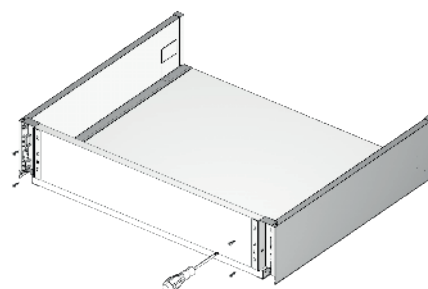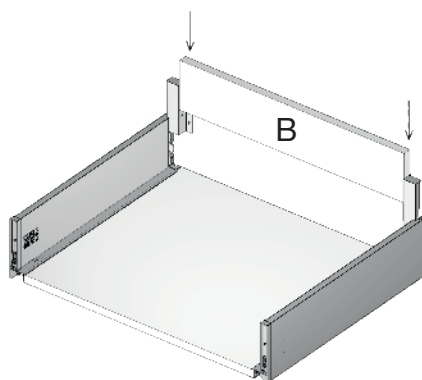


Assembly steel back panel

1

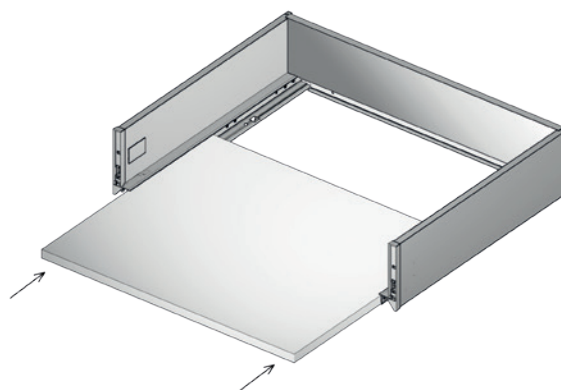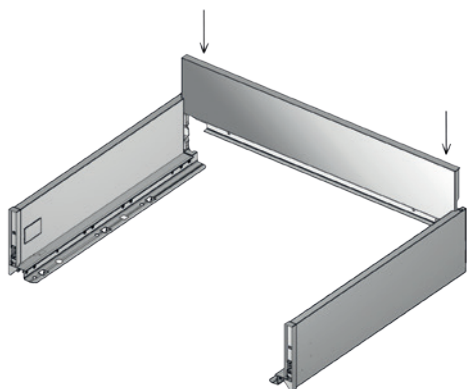


2

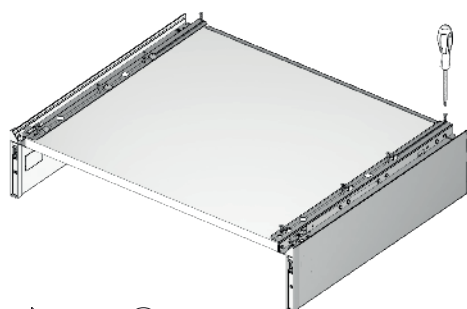

8x



Ø3.5 x 15 mm

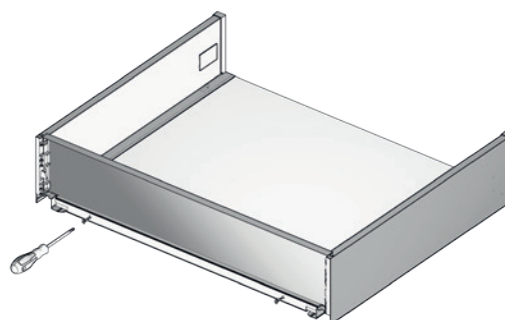


2x




Ø3.5 x 15 mm


Insertion of Front Connectors

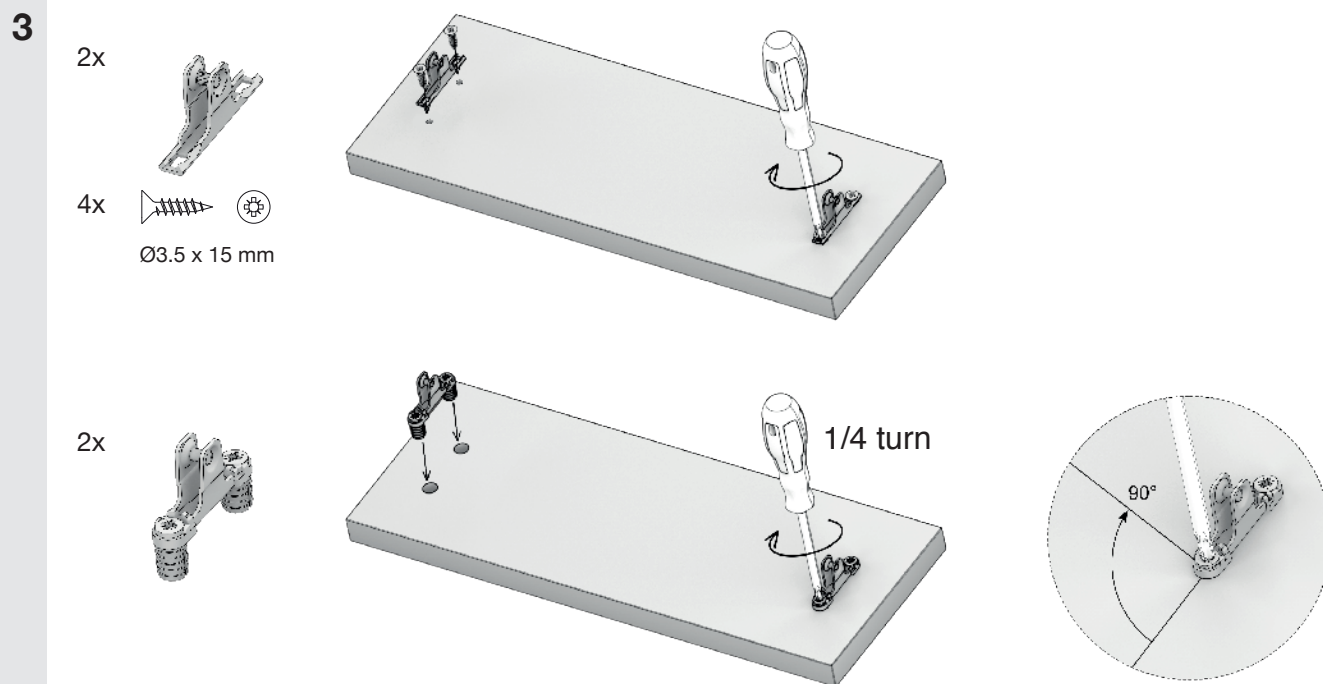

Front Panel Mounting

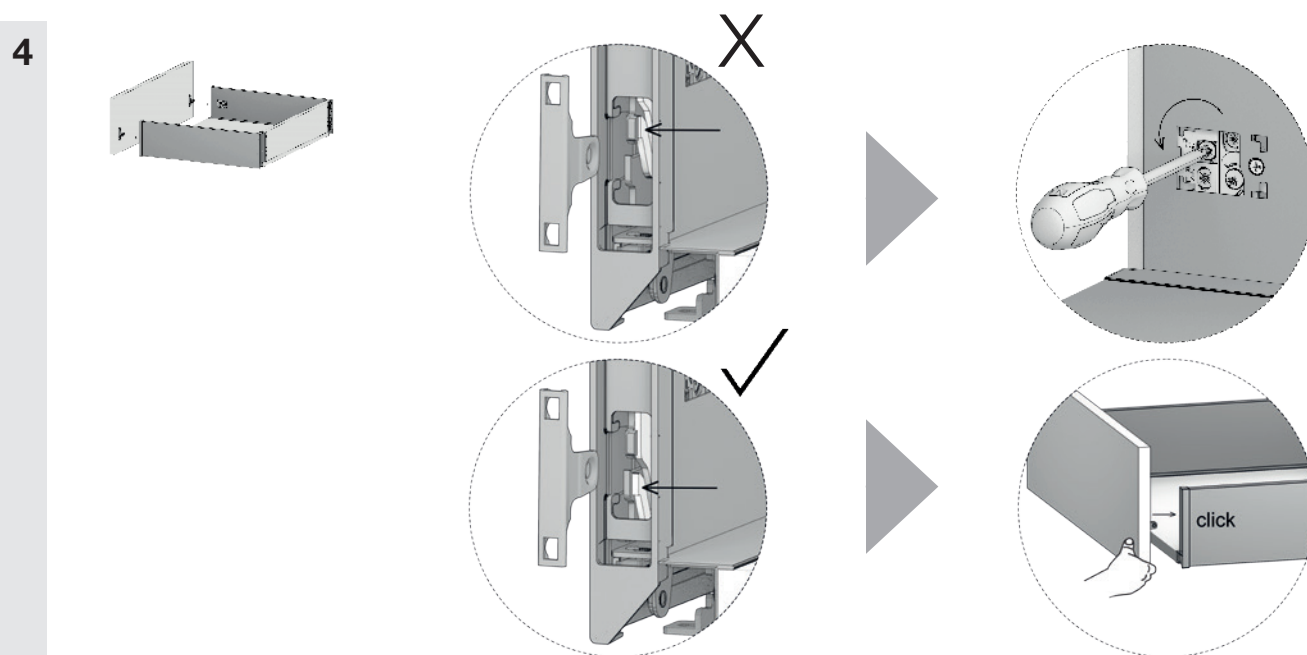


Drawer Insertion

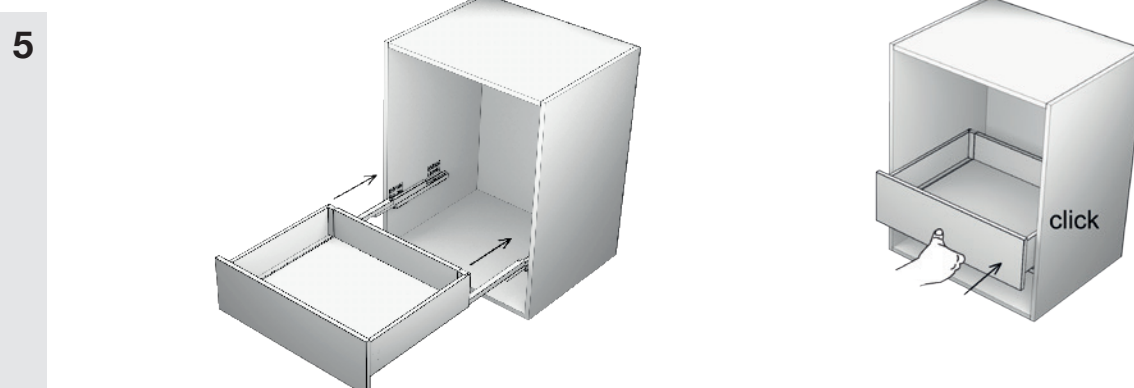


Adjustments


i






Side adjustment

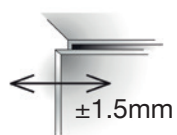

Height adjustment



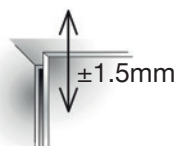


Tilt adjustment

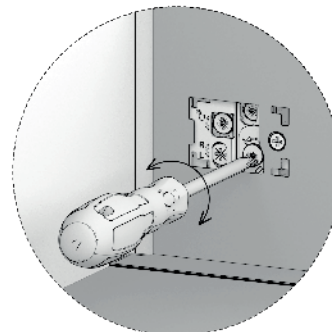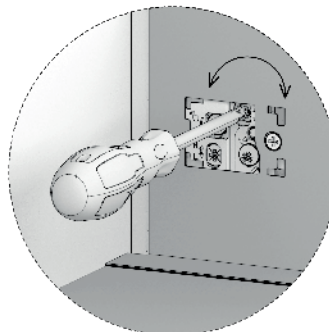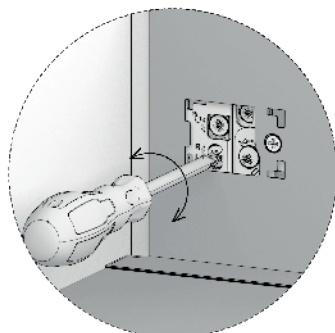




Drawer removal

i

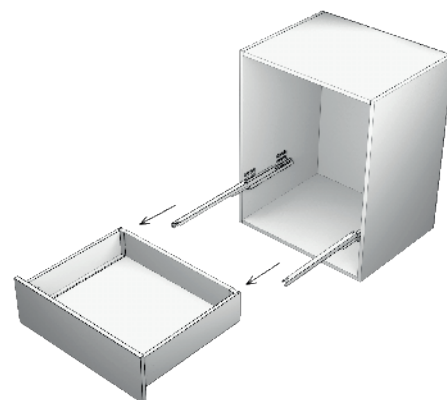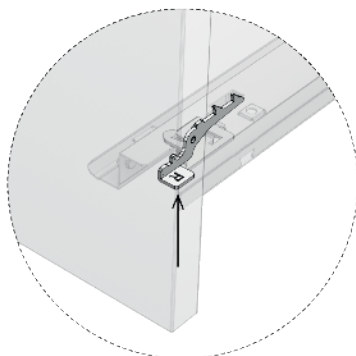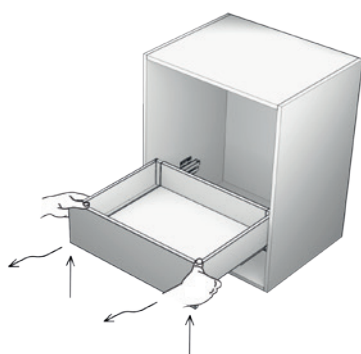



Front panel removal

i

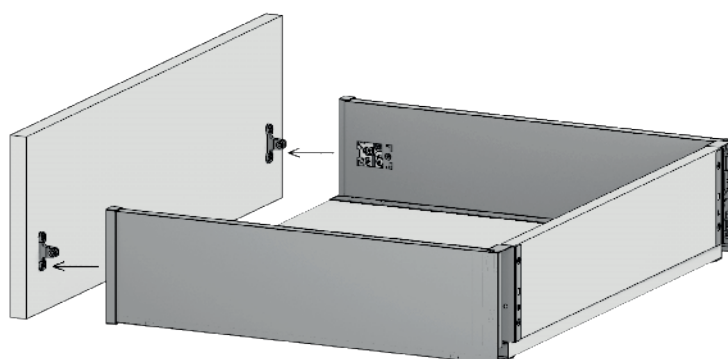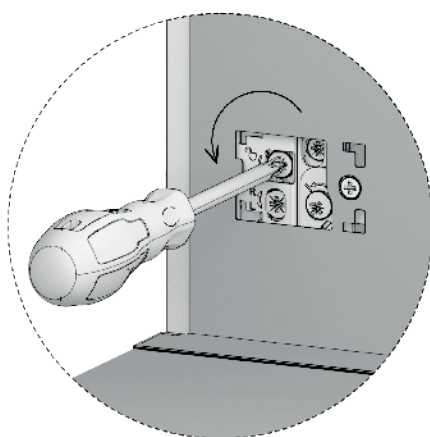


Assembly of Inner Drawer Front

1 Cutting dimensions

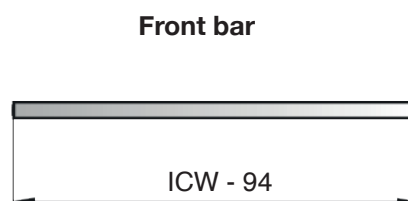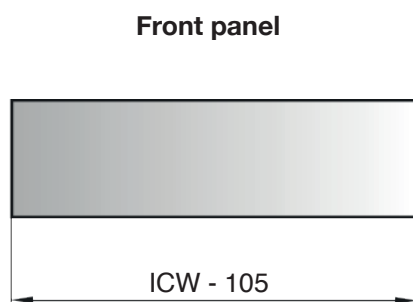

2 Slimline+ DW70

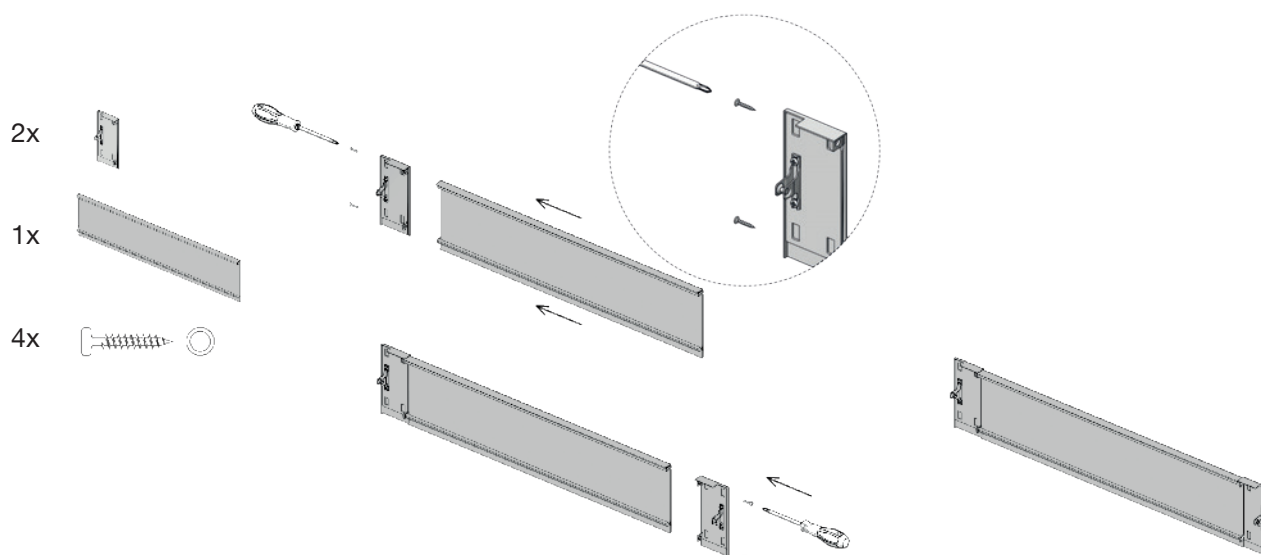

Slimline+ DW145 / DW182

