
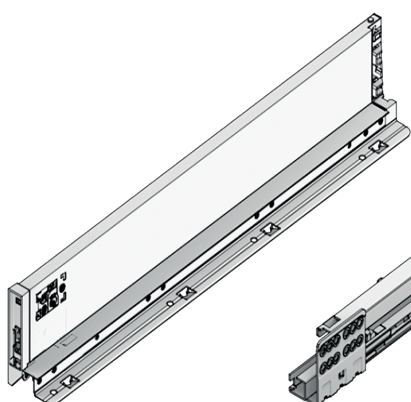



Tekform Slimline+ Drawer

Assembly instructions

Titus+

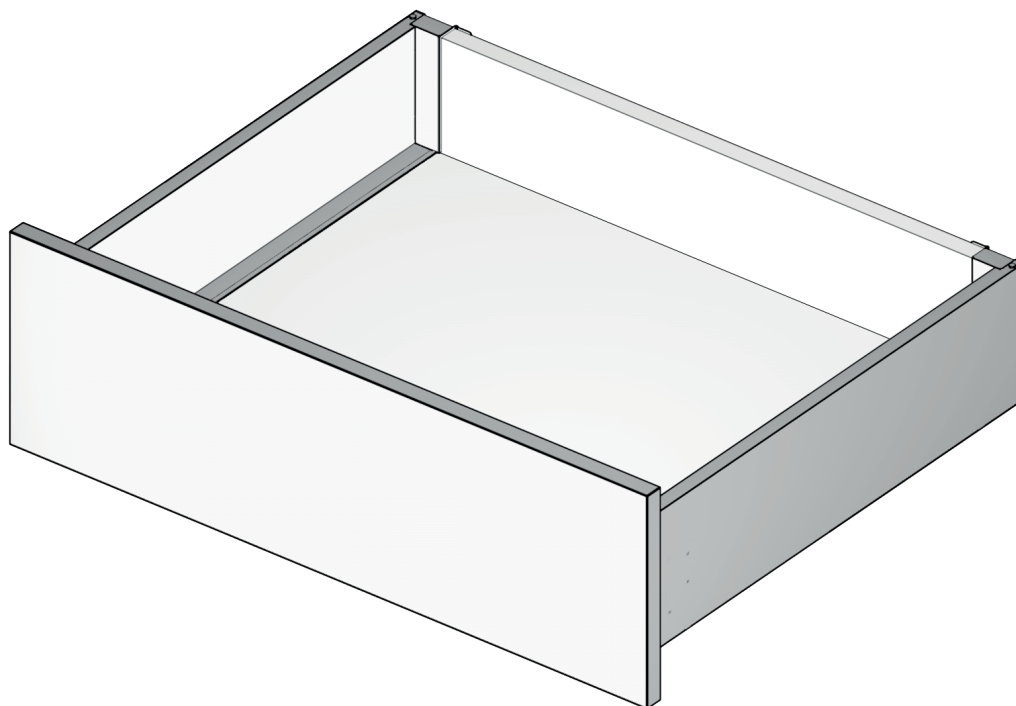


2x

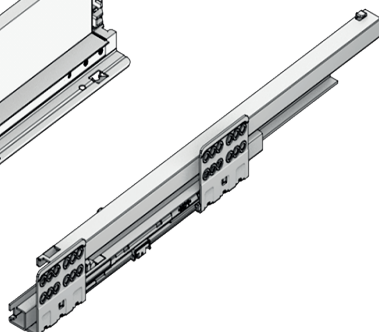

2x



2x




2x



2x

Tool needed for assembly

PZ2



Recommended screws (not included)

Ø6.3 x 13mm





Ø3.5 x 15mm



Tekform Titus+

Runner mounting



i

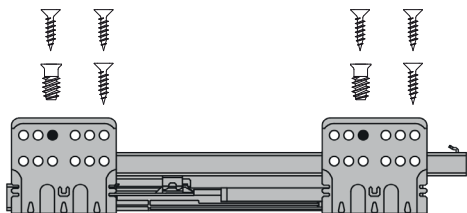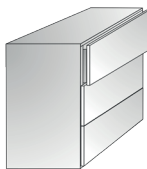



Ø6.3 x 13mm
Ø3.5 x 15mm

NL=270 mm
NL=300 mm
NL=350 mm
NL=400 mm
NL=450 mm

NL=500 mm
NL=550 mm

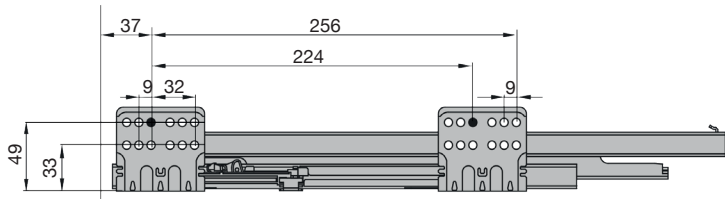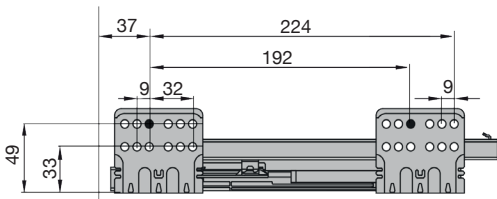



i

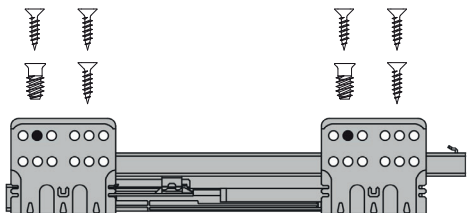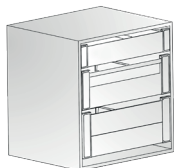

Ø6.3 x 13mm
Ø3.5 x 15mm



NL=270 mm
NL=300 mm
NL=350 mm
NL=400 mm
NL=450 mm

NL=500 mm
NL=550 mm

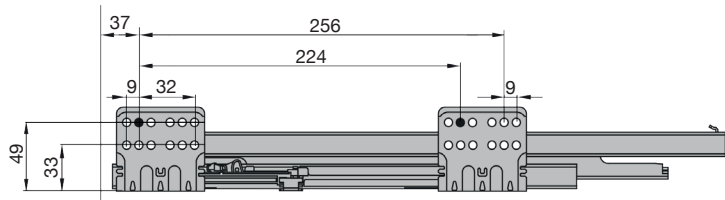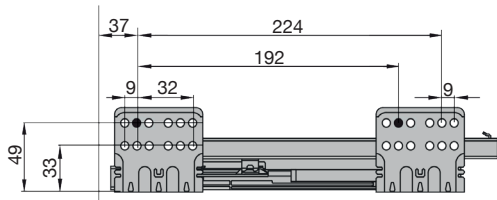


Planning

i

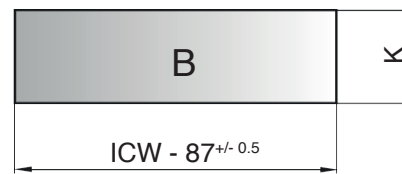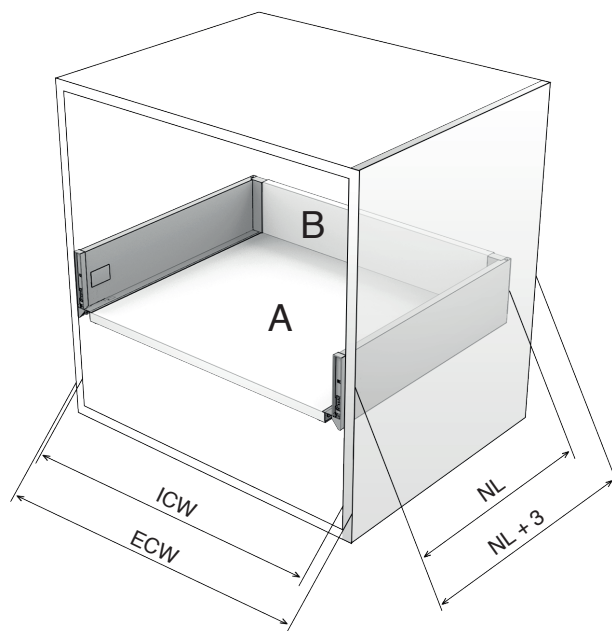

DW70	K=68
DW100	K=100
DW145	K=151
DW182	K=183

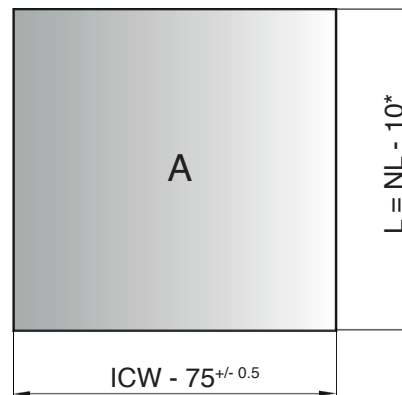


* For drawers with steel back panel
L = NL - 20

Front Panel Dimensions and Drilling


i

DW70

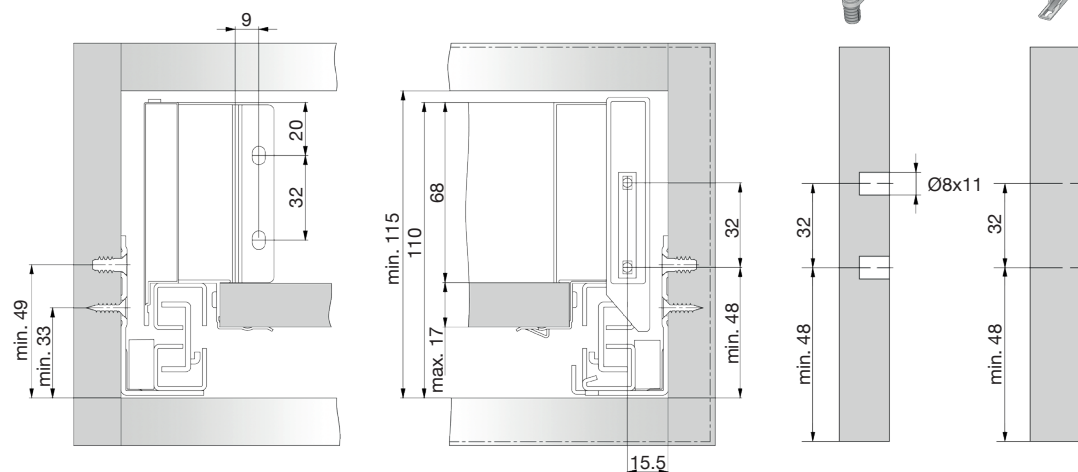


i


DW100

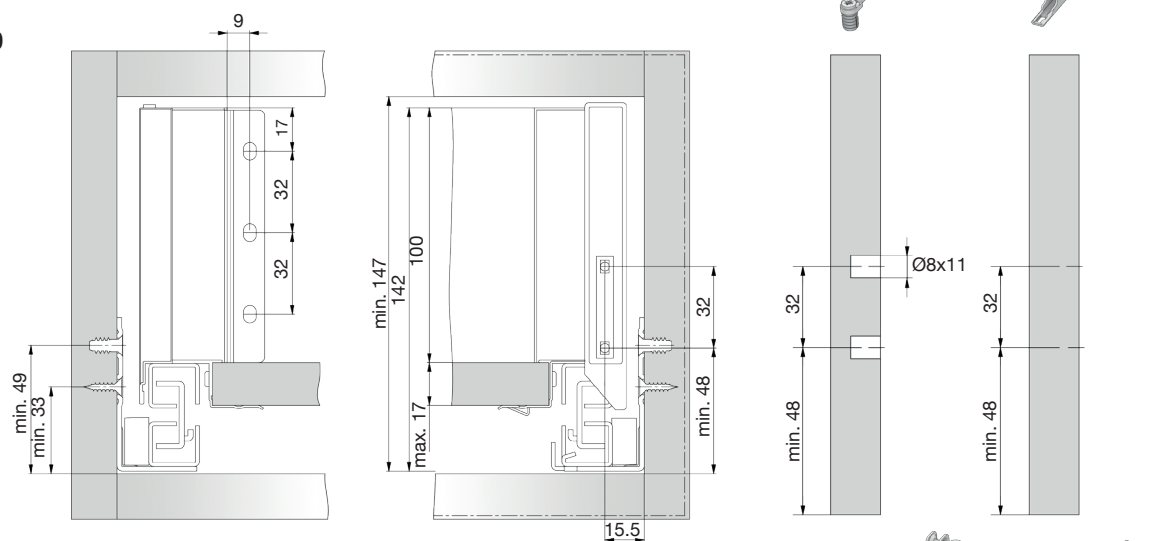

DW145

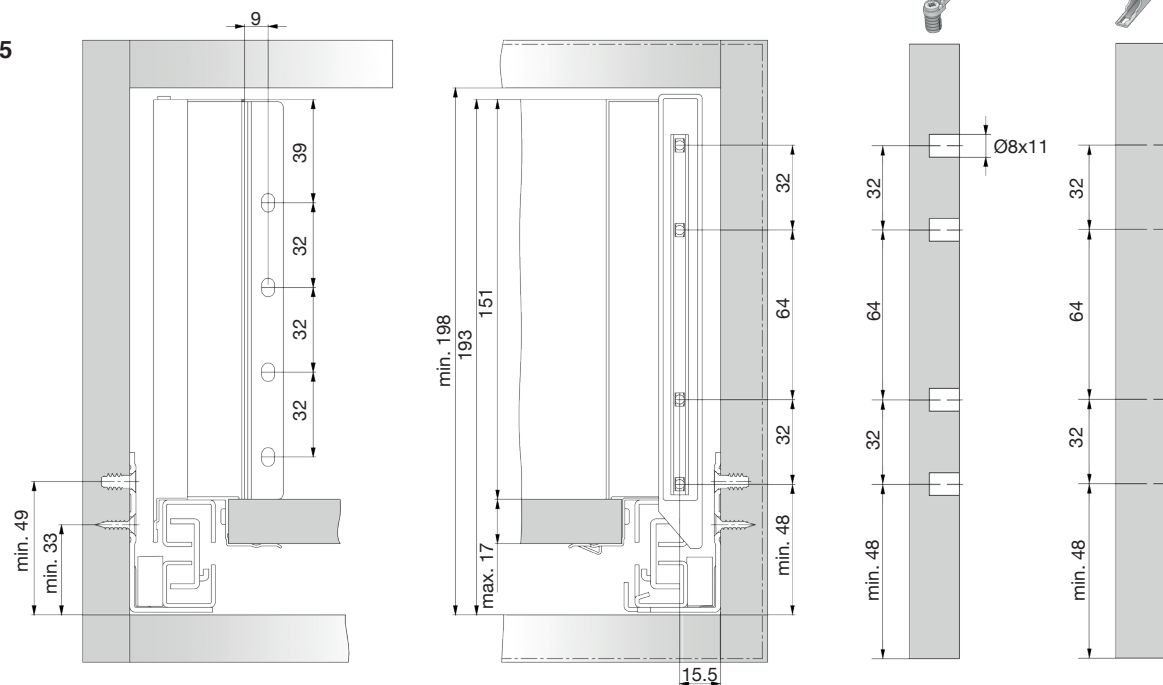

DW182

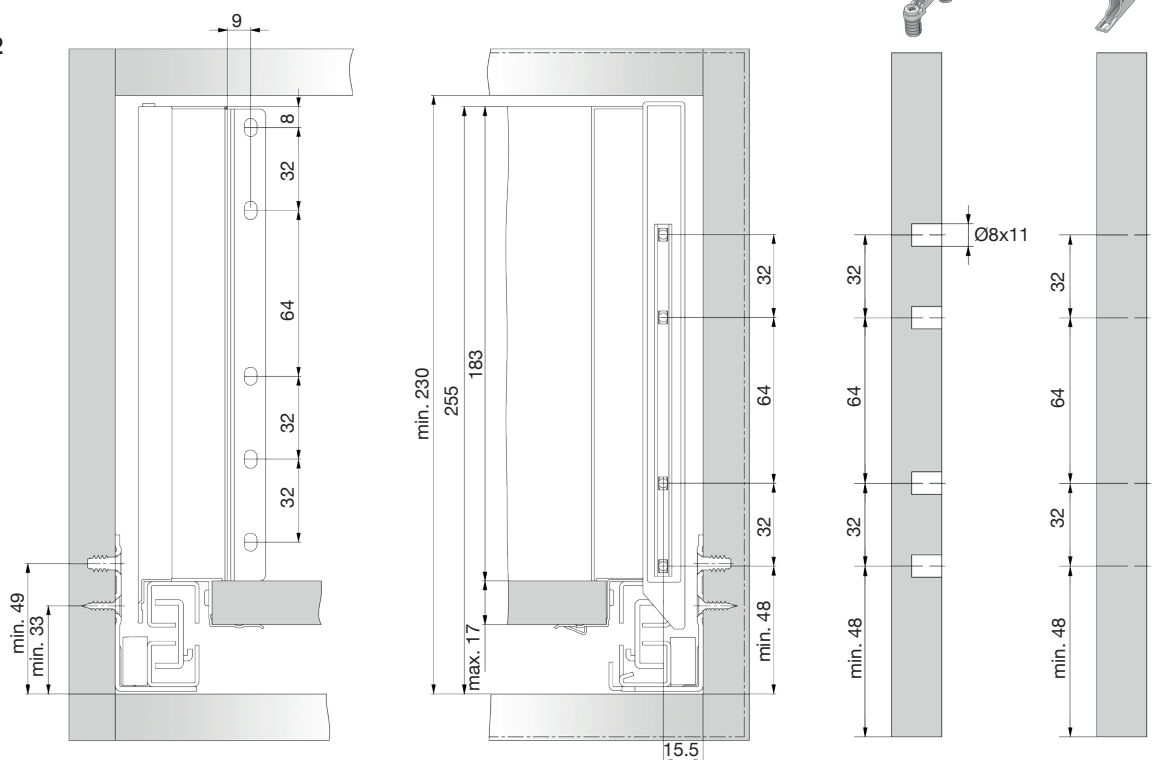

Assembly wooden back panel

1



2x



8x



Ø3.5 x 15 mm

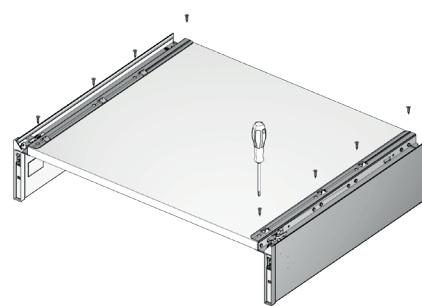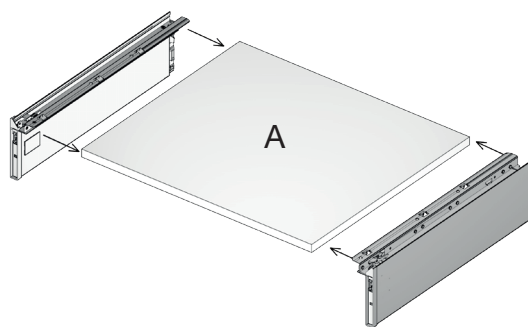

2



2x



4x





Ø3.5 x 15 mm

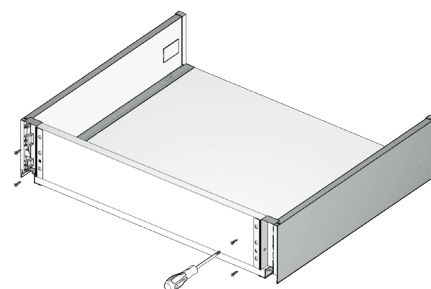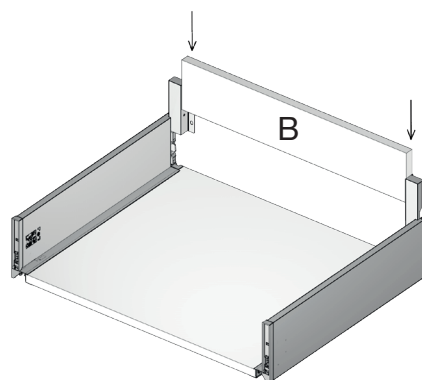


Assembly steel back panel

1

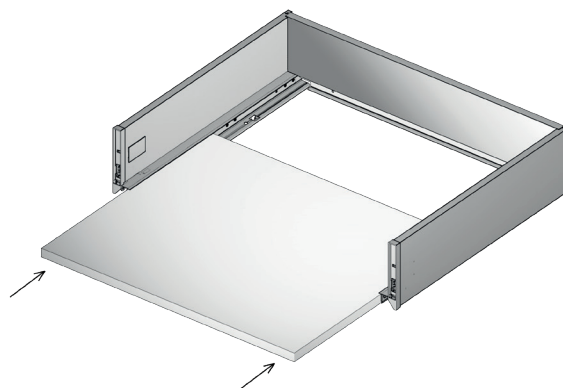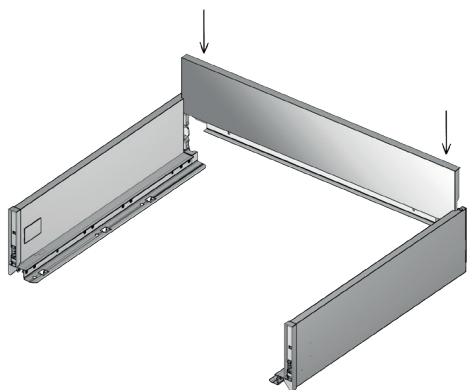


2

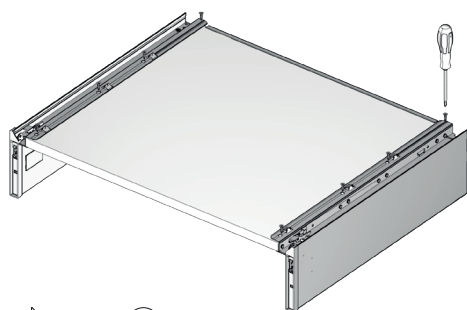

8x



Ø3.5 x 15 mm

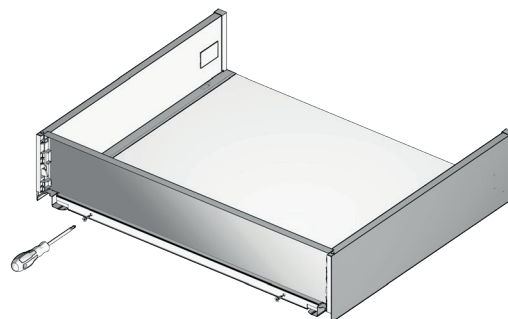


2x



Ø3.5 x 15 mm


Insertion of Front Connectors

3

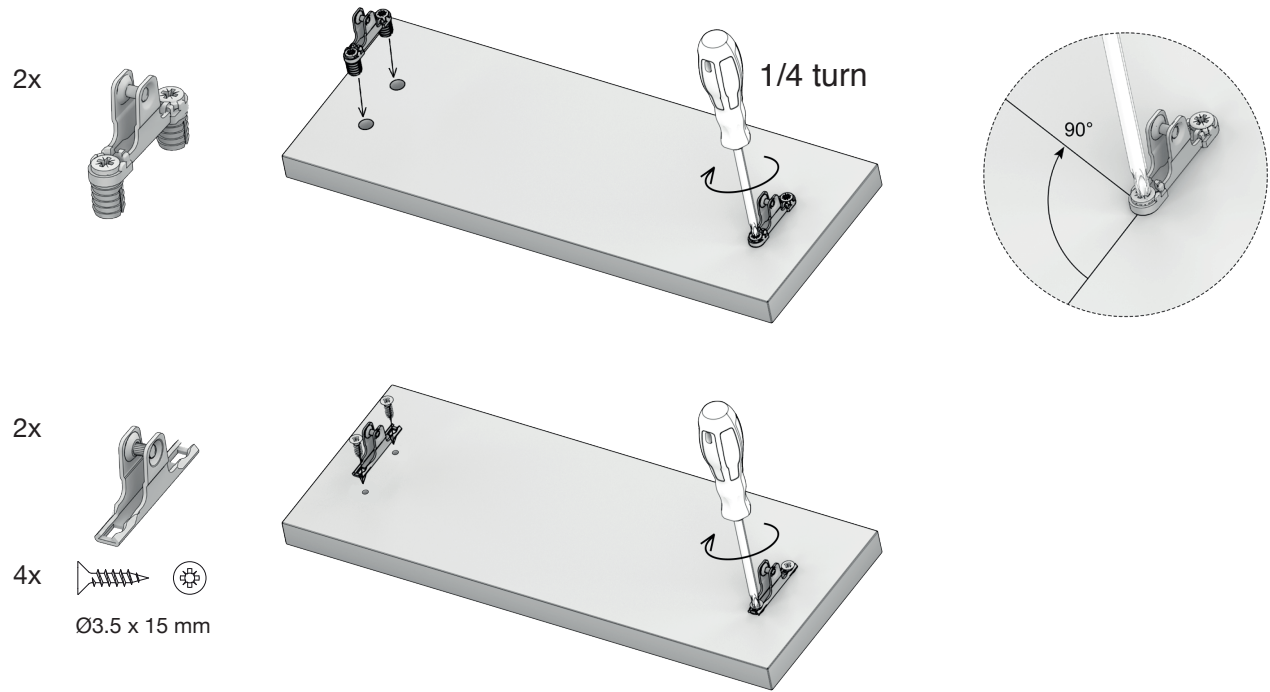


Front Panel Mounting

4

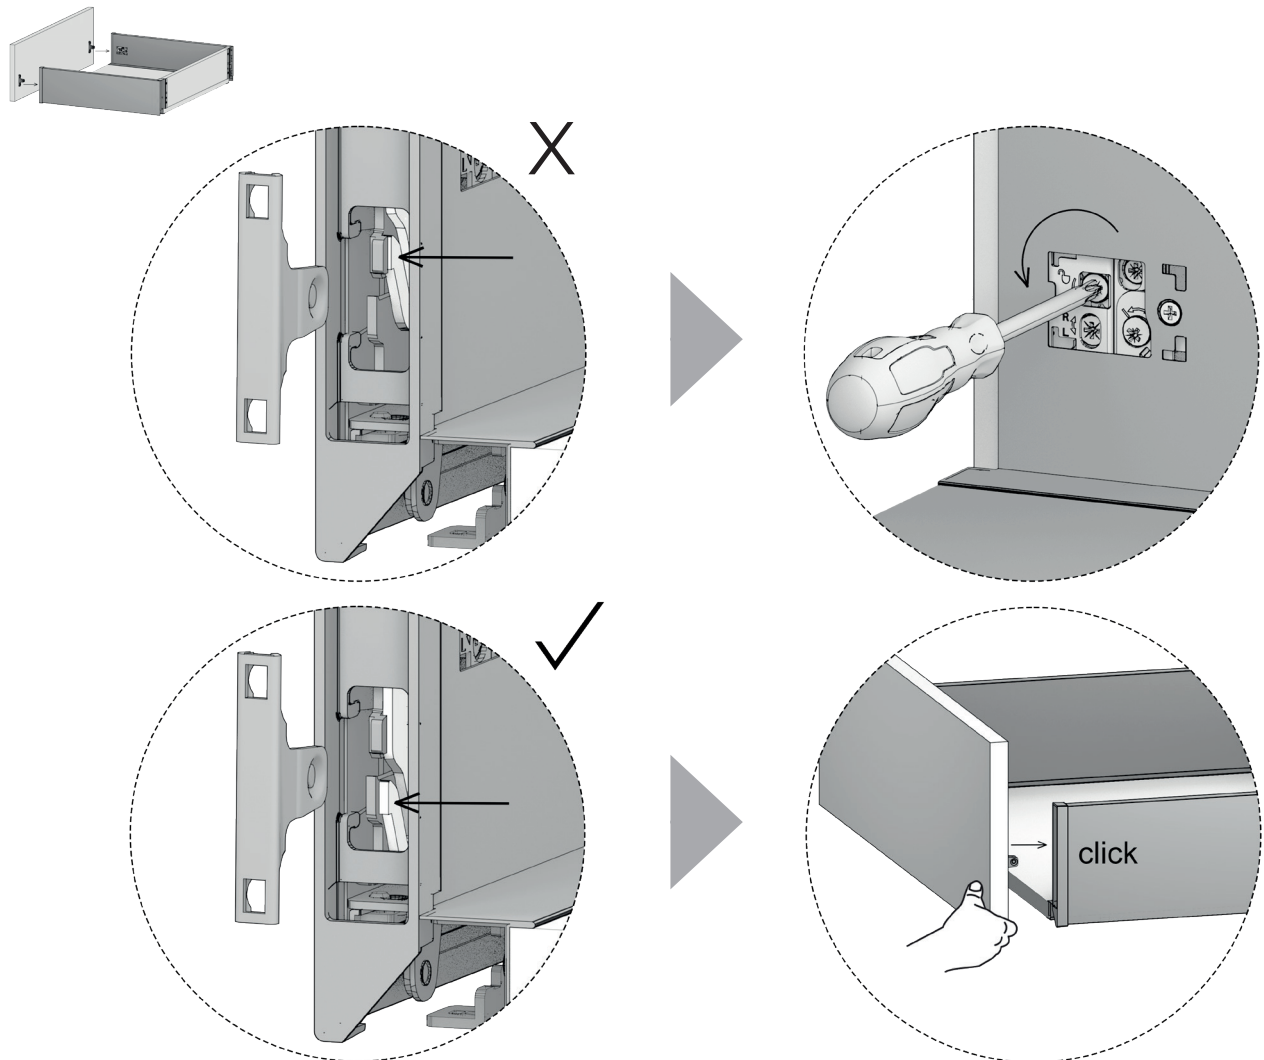


Drawer Insertion

5

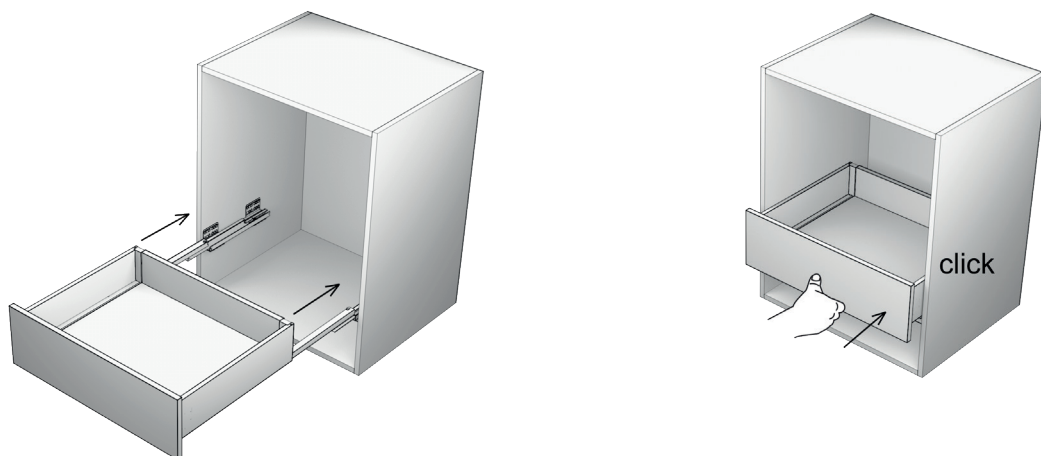


Adjustments


i







Side adjustment

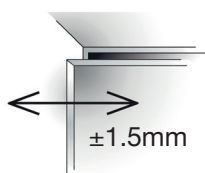

Height adjustment


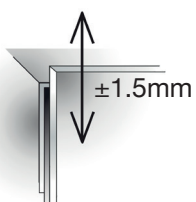


Tilt adjustment

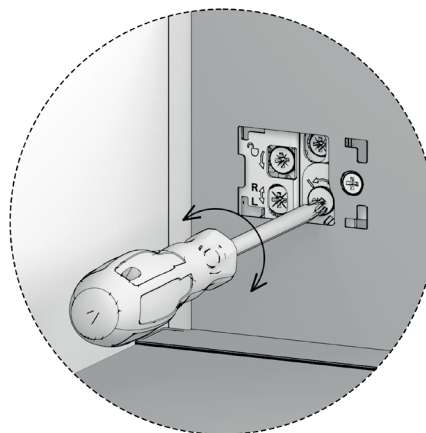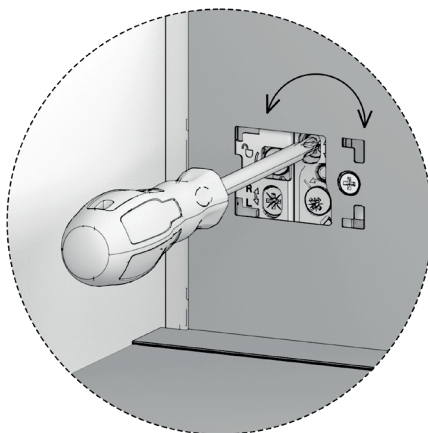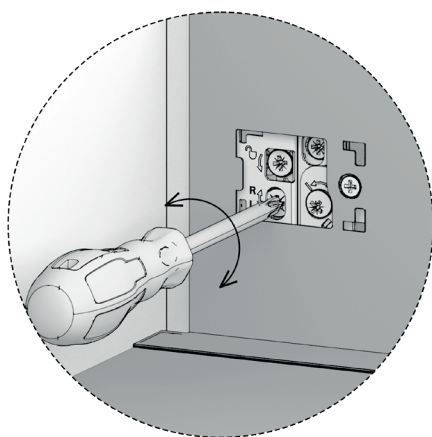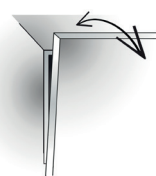


Drawer removal

1

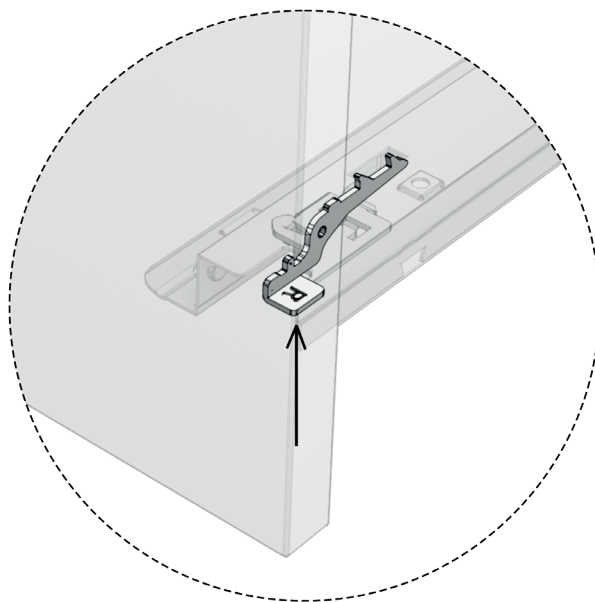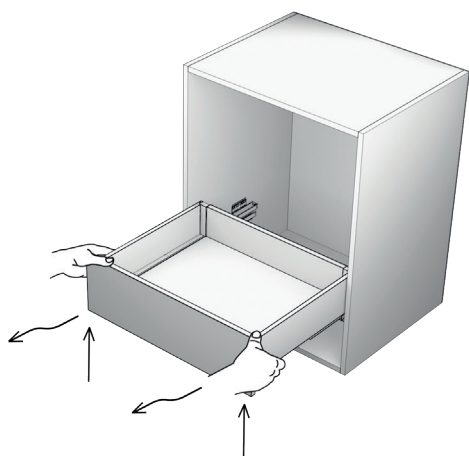

2

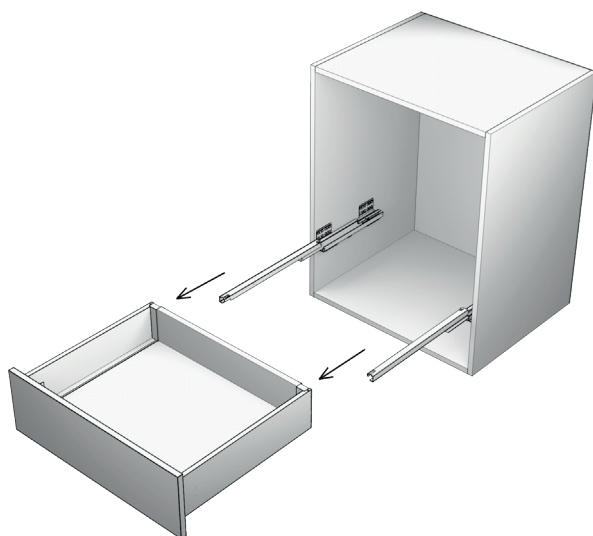

Front panel removal

i

